

ITEM NO:4501 T-2810

ASSEMBLY INSTRUCTIONS

NOTE: THIS NOT RECOMENDED FOR COMMERCIAL USE
 KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
 DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!

IMPORTANT

FOR SERVICE PURPOSE PLEASE DO NOT REMOVE THE CUSTOMER SERVICE CODE LABEL ON THE MERCHANDISE. IT IS ON THE UNDERSIDE OF BED. T/T BUNK BED







T/T BUNK BED






ATTENTION: DO not tighten all bolts until the bed is assembled completely.

Hardware pack attached in the package in red plastic bag.

Assembly Instructions

PARTS LIST

A		m8x60 Bolts	16PCS
B		m8x80	8 PCS
C		m8 Nuts	16PCS
D		m8 Open wrench	1PC
E		m8 Allen wrench	1PC
F		WASHERS	24PCS

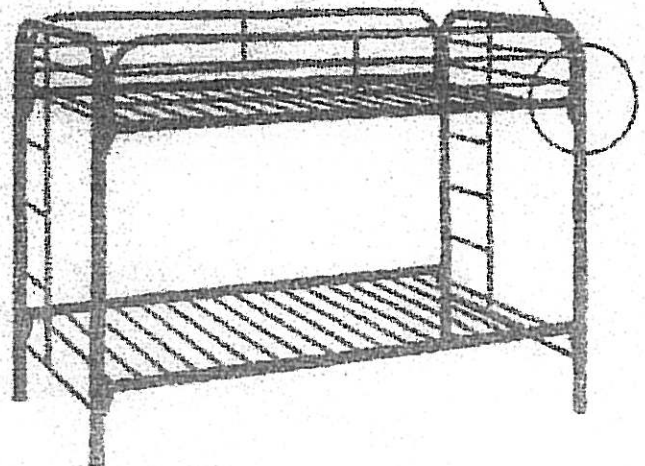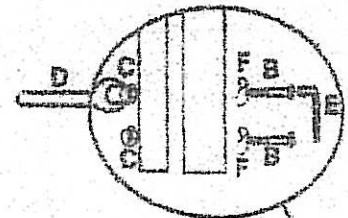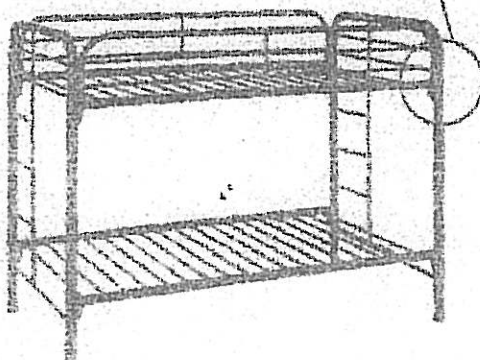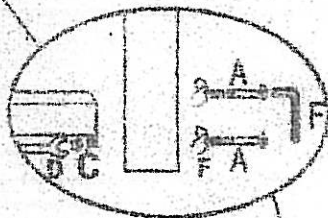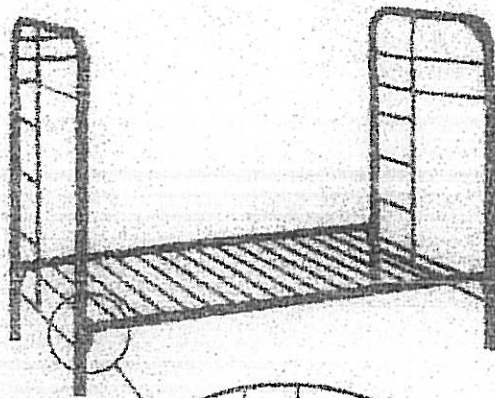

HARDWARE PACK ATTACHED IN THE PACKAGE IN RED PLASTIC BAG