


MODEL :0016J QUEEN STORAGE BED

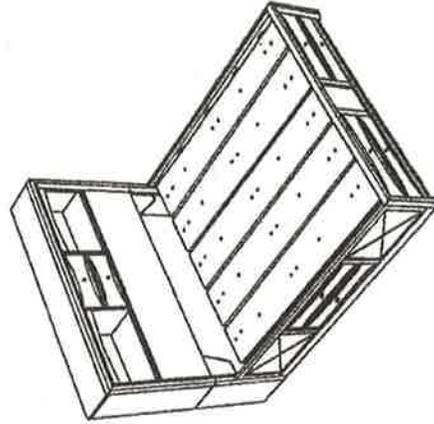

(BOX 1)
BOX OF HEADBOARD & FOOTBOARD

| NO | ITEM | QTY |
|----|------------------------------------|-----|
| A | Headboard | 1 |
| B | Footboard | 1 |
| C | Headboard Leg (L/R) | 2 |
| D | Triangle Support Panel - 200 x 200 | 2 |
| E | Drawer Suppt. Rail - 2 | 4 |
| F | Support Leg 1 - 30 x 36 x 75mm | 1 |
| G | Support Leg 3 - 30 x 36 x 107mm | 1 |

(BOX 2)
BOX OF SIDERAIL

| NO | ITEM | QTY |
|----|---------------------------------------|-----|
| H | Side Rail | 2 |
| I | Pod Shi | 3 |
| J | Fullboard Drawer Frame | 1 |
| K | Conceal Panel | 5 |
| L | Ribbed Back Support - 20 x 30 x 150mm | 1 |
| M | Drawer Suppt. Rail - 1 | 1 |
| N | Support Leg 1 - 26 x 36 x 51mm | 5 |
| O | Fullboard Back Support - 40 x 100mm | 1 |
| P | Bed Shi with nyling | 2 |

(BOX 2)
HARDWARE LIST

| NO | ITEM | QTY |
|----|---|-----|
| 8 | FLAT HEAD CHIPBOARD SCREW m3.5 x 32mm RBW | 16 |
| 9 | PAN HEAD CHIPBOARD SCREW m3.5 x 20mm BLK | 27 |
| 10 | JCBC BOLT 30MM BLK M6 x | 15 |
| 11 | JCBC BOLT 30MM BLK M6 x | 6 |
| 12 | SPRING WASHER RBW 1/4" | 15 |
| 13 | FLAT WASHER 1/4" ID x 11mm OD BLK | 15 |
| 14 | Z-BRACKET | 1 |
| 15 | ALLERNY m4 x 110mm BLK | 1 |

(BOX 3 & 4)
BOX OF PART & HARDWARE

| NO | ITEM | QTY |
|----|--------------------------------------|-----|
| Q | Drawer - 1 | 4 |
| R | Drawer - 2 | 2 |
| 16 | HANDLE | 8 |
| 17 | THREAD M. SCREW HANDLE M4 x 40mm BLK | 4 |
| 18 | THREAD M. SCREW HANDLE M4 x 50mm BLK | 4 |

(BOX 1)
BOX OF HEADBOARD & FOOTBOARD


| NO | ITEM | QTY |
|----|-----------------|-----|
| A1 | Headboard Frame | 2 |

REMARK!!!
* DRAWER 1 (P) & 2 (O) ARE IDENTICAL AND COULD BE USED IN COMMON, REGARDLESS LEFT OR RIGHT.

NOTE : DURING ASSEMBLY, DO NOT TIGHTEN ANY HARDWARE UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.


ASSEMBLY INSTRUCTIONS

STEP 1 : Attached and tighten the Headboard Leg L/R (C) to the Headboard (A). Insert Spring Washer (5) Flat Washer (6), use JCBC Bolt (3) to fix with Allen Key (7).

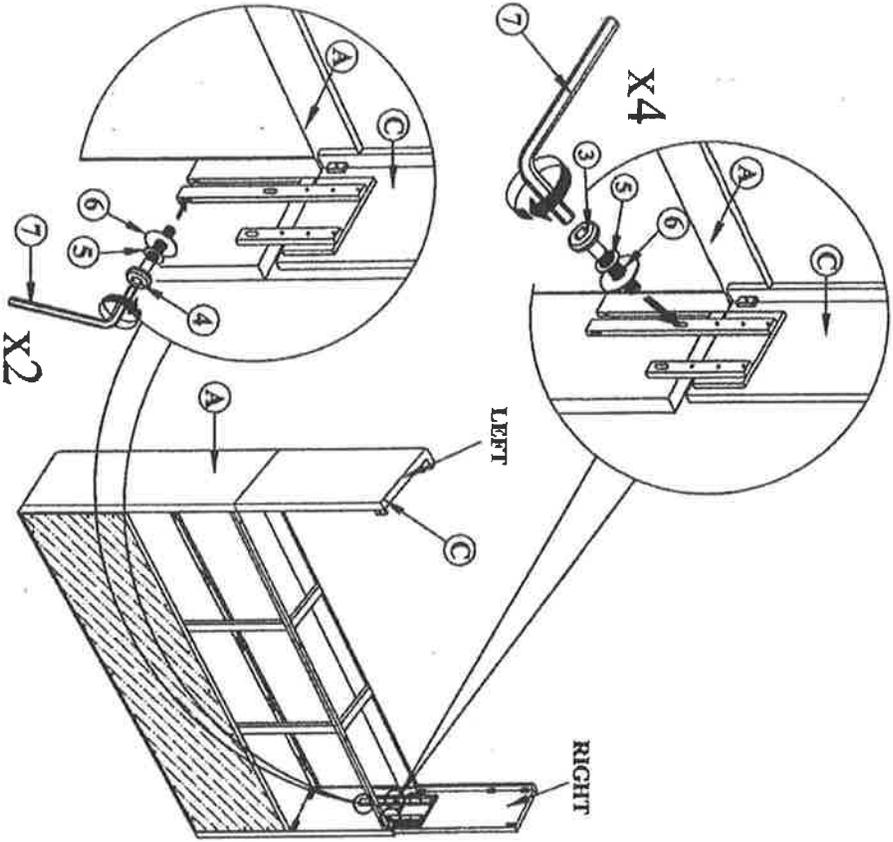

STEP 2 : Attached and tighten the Headboard Leg L/R (C) to the Headboard (A). Insert Spring Washer (5) Flat Washer (6), use JCBC Bolt (4) to fix with Allen Key (7).


STEP 3 : Attached and tighten the Triangle Support Panel (D) to the Headboard and fix the Panhead Screw (2) using Screw Driver. (Not Included)

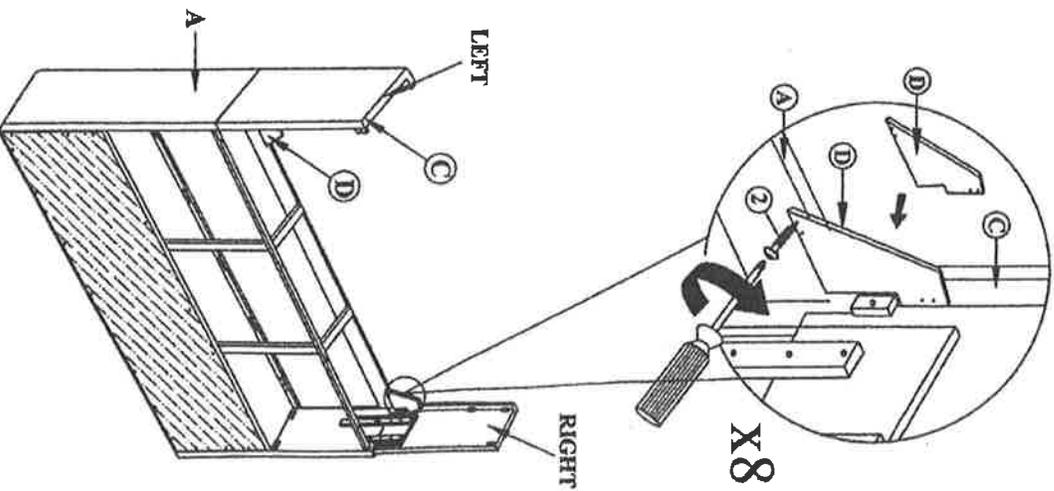


NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

STEP 4 : Attach Headboard Back Support (L) and (O) follow the picture. Fix the CSK Screw (1) using a Screw Driver. (Not Included)

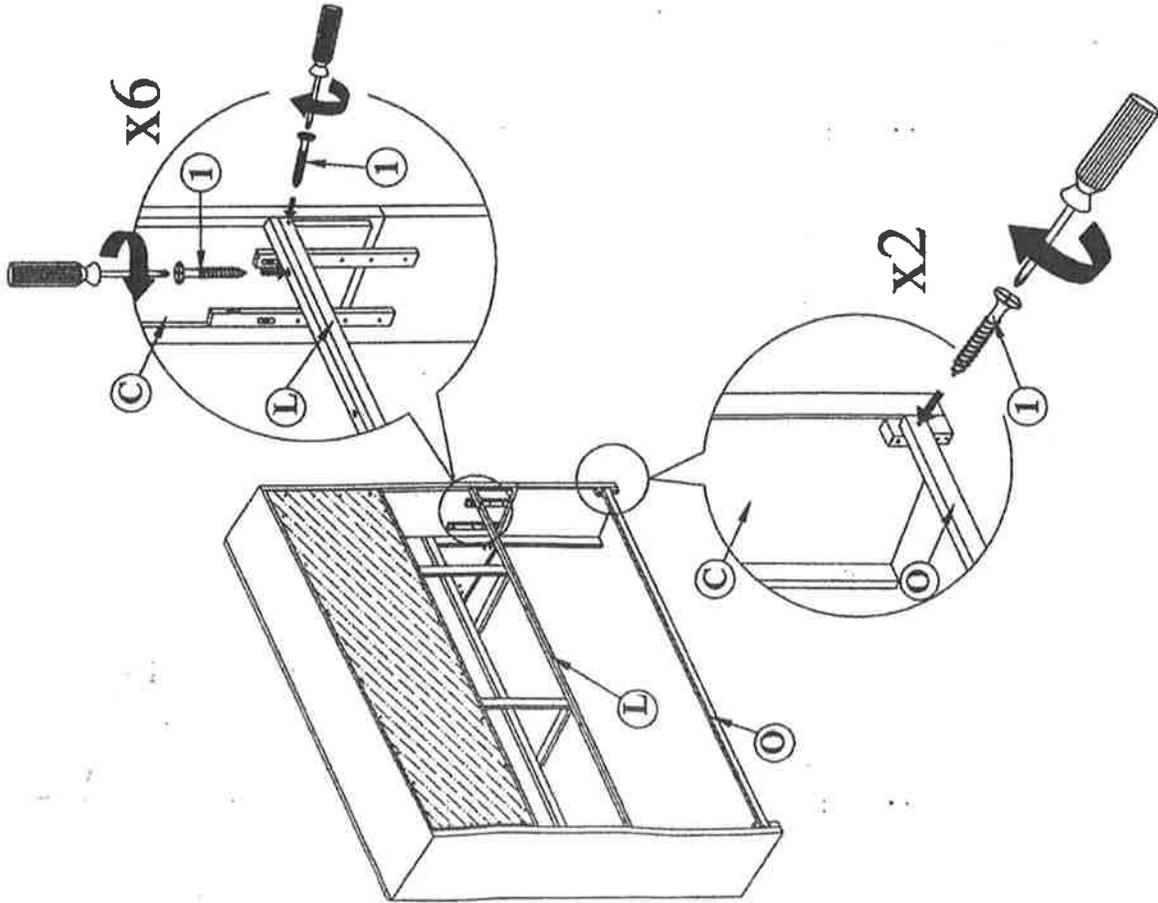


STEP 5 : Attach the Side Rail (H) to the Headboard Leg (C) and Footboard (B). Insert Spring Washer (12) , Flat Washer (13) , use JCBC Bolt (10) to fix with Allen Key (15) .

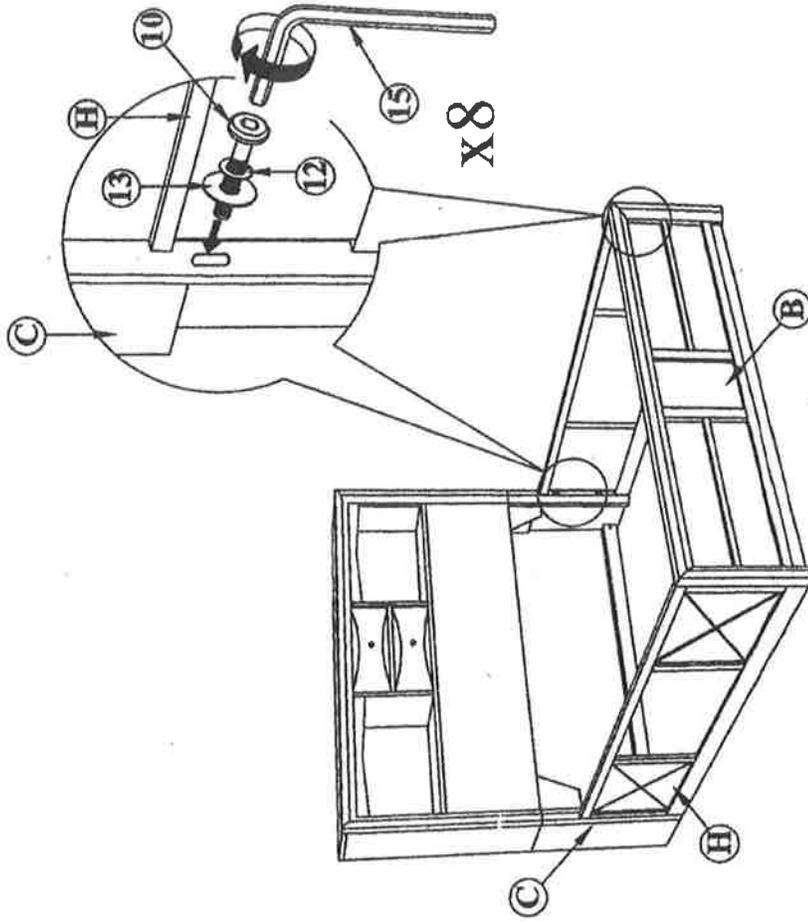

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

STEP 6 : Attach the Footboard Drawer Frame (J) to the Side Rail (H). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (15).

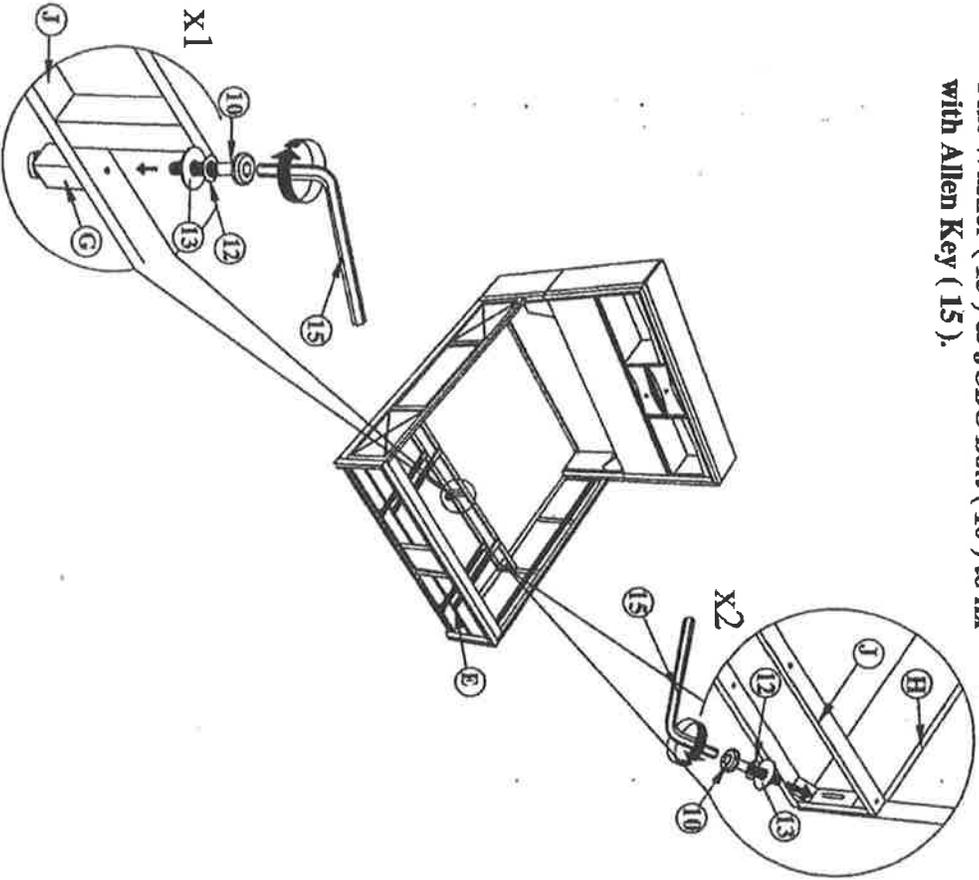

STEP 7 : Attach Support Leg 3 (G) to the Footboard Drawer Frame (J). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (15).

STEP 8 : Attach the Drawer Support Rail (E) to the Footboard Drawer Frame (J). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (15).

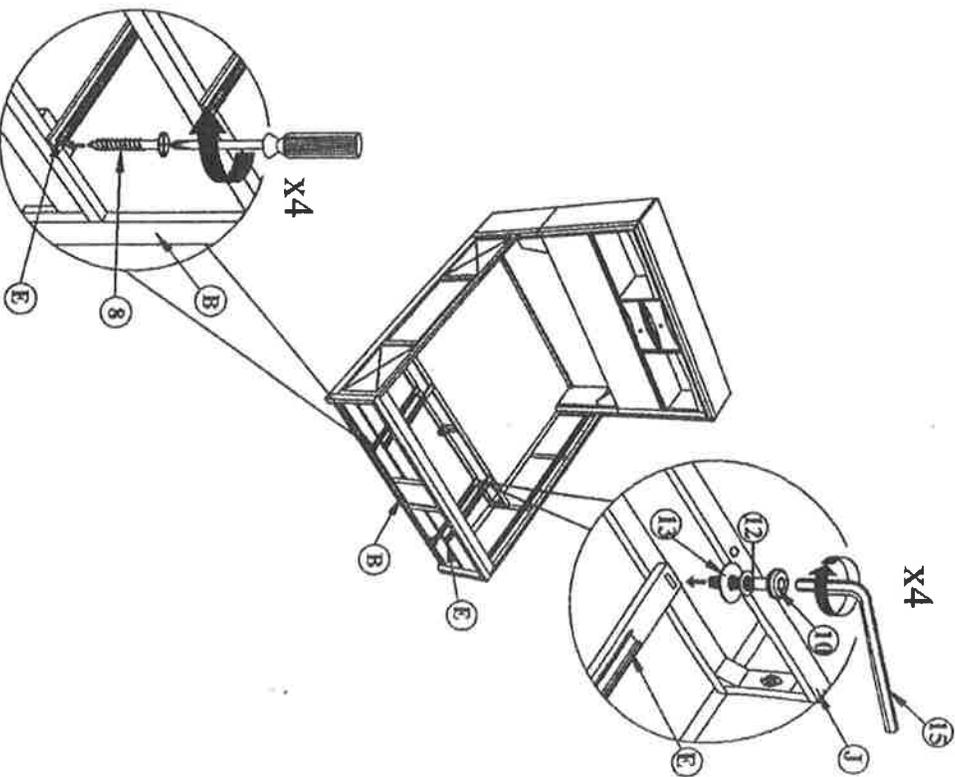


STEP 9 : Attach the Drawer Support Rail (E) to the Footboard (B) using CSK Screw (8) and tighten with Screw Driver. (Not Included)

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

STEP 10 : Attach Support Leg 2 (F) to the Drawer Support Rail (M). Use JCBC Bolt (11) to fix with Allen Key (15).

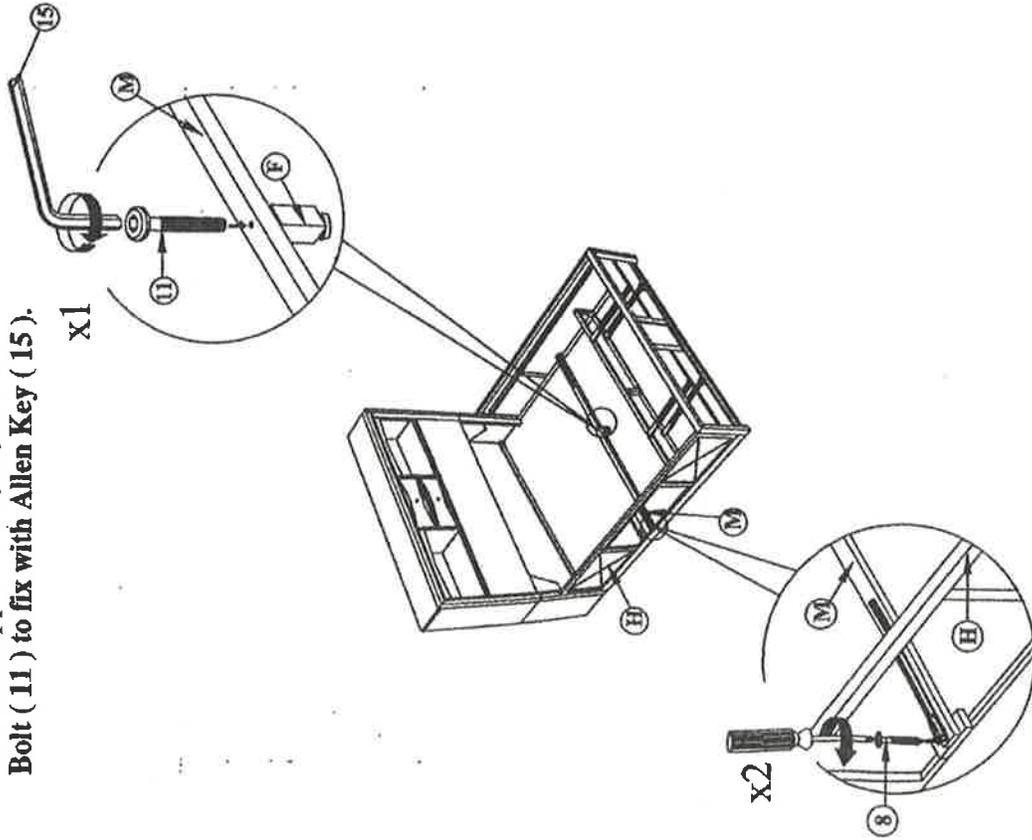

STEP 11 : Attach Drawer Support Rail (M) to the Side Rail (H) using Csk Screw (8) and tighten with Screw Driver. (Not Included)

Step 12 : Attach Bed Slat (I) & (P) to the Bed Slat Support (N). Use JCBC Bolt (11) to fix with Allen Key (15). (Loosen and tighten the Adjuster to stability of bed)

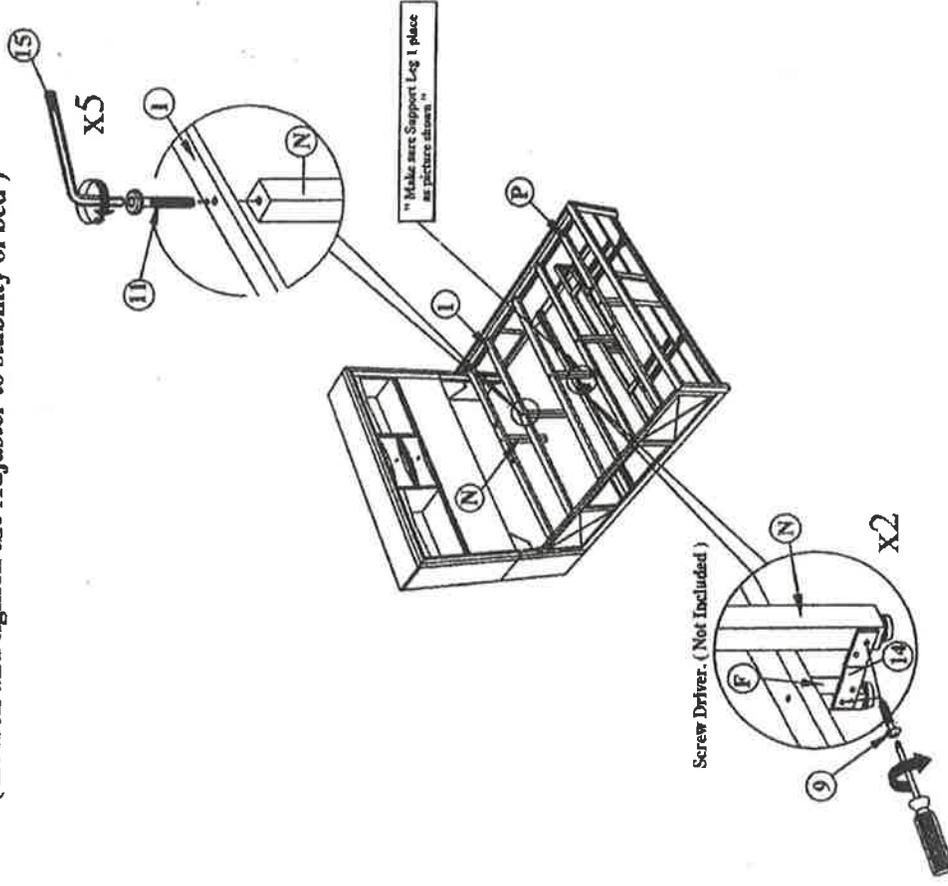


STEP 13 : Attach Z-Bracket (14) to the Bed Slat Support (N) and Support Leg 2 (F). Use Panhead Screw (9) and tighten with screw driver (not included)

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

STEP 14 : Attach Drawer-2 (R) on Drawer Support Rail -1 (M).

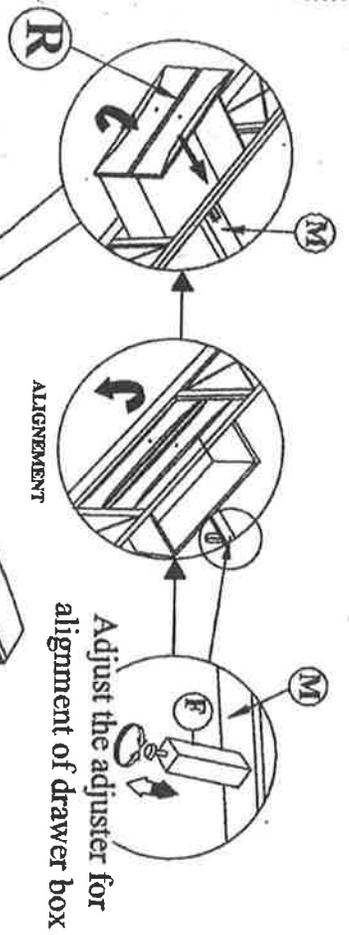

Adjust the adjuster for alignment of drawer box


STEP 15 : Attach Drawer-1 (Q) on Drawer Support Rail -2 (E).

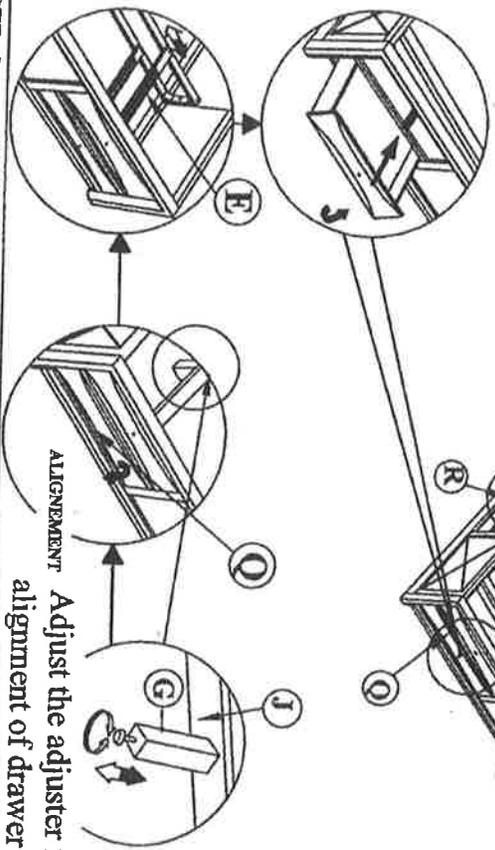


Adjust the adjuster for alignment of drawer box

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

STEP 16 : Install the Handle (16) in front of drawer (R). Tighten the Handle Screw (18) using Screw Driver. (Not Included)

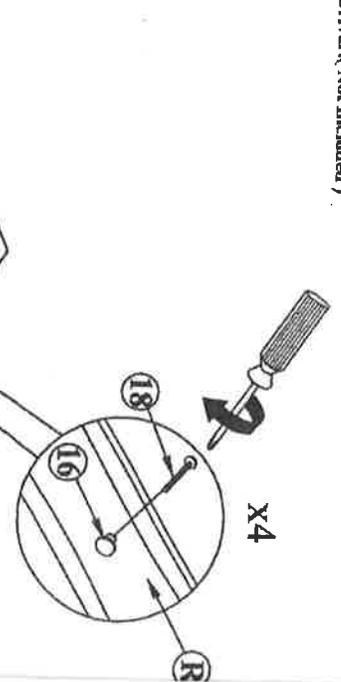

STEP 17 : Install the Handle (16) in front of drawer (Q). Tighten the Handle Screw (17) using Screw Driver. (Not Included)

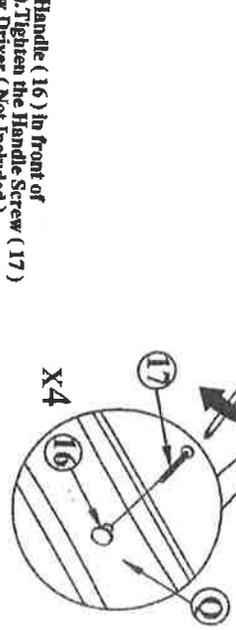

ASSEMBLY INSTRUCTIONS

STEP 18 : Push the Side Rail (H) with Bed Slat (I) and tighten with CSK Screw (8) by using Screw Driver. (Not Included)
 (Make sure follow the center Marking Line as shown)

STEP 20 : Attach Concealed Panel Slat (K) at the Upper Bed Slat (I) using Panhead Screw (9) and tighten with Screw Driver. (Not Included)

Diagram 1 :




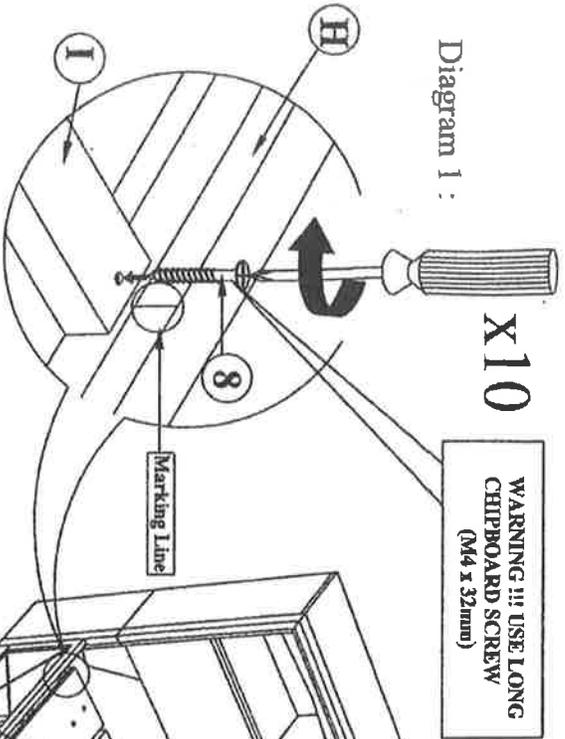


Diagram 3 :

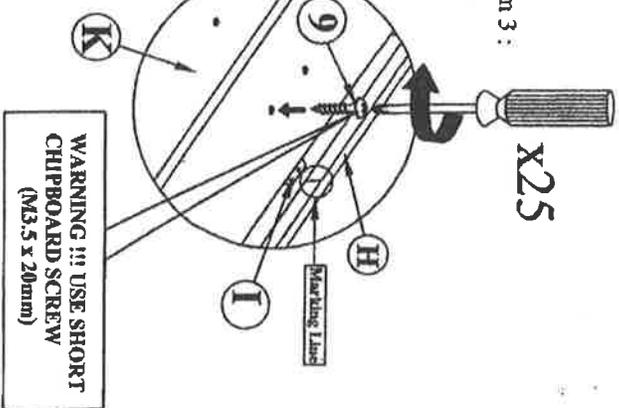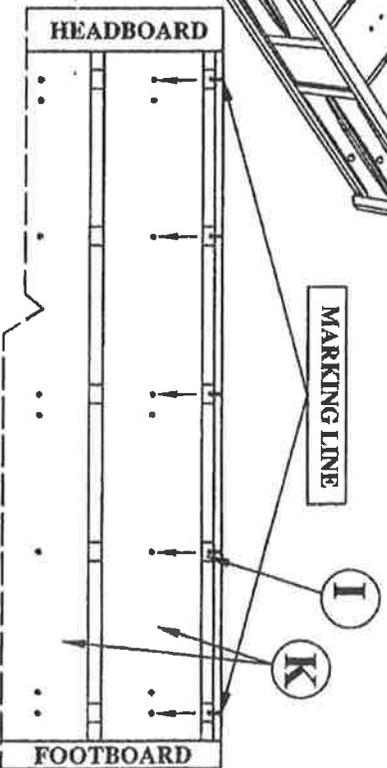

STEP 19 : Realign the Concealed Panel Slat (K) to the diagram as shown.

Diagram 2 :

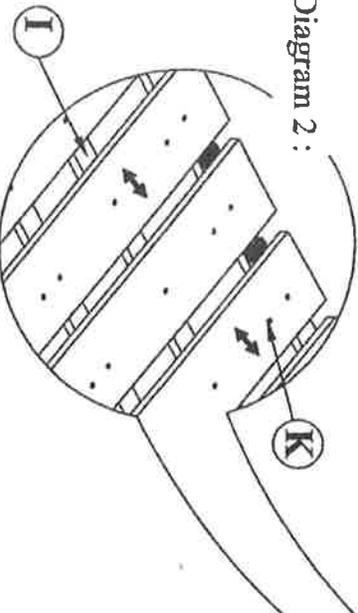

TIGHTEN THE PANHEAD SCREW (9) BY FOLLOW THE ARROW AS SHOWN

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.