



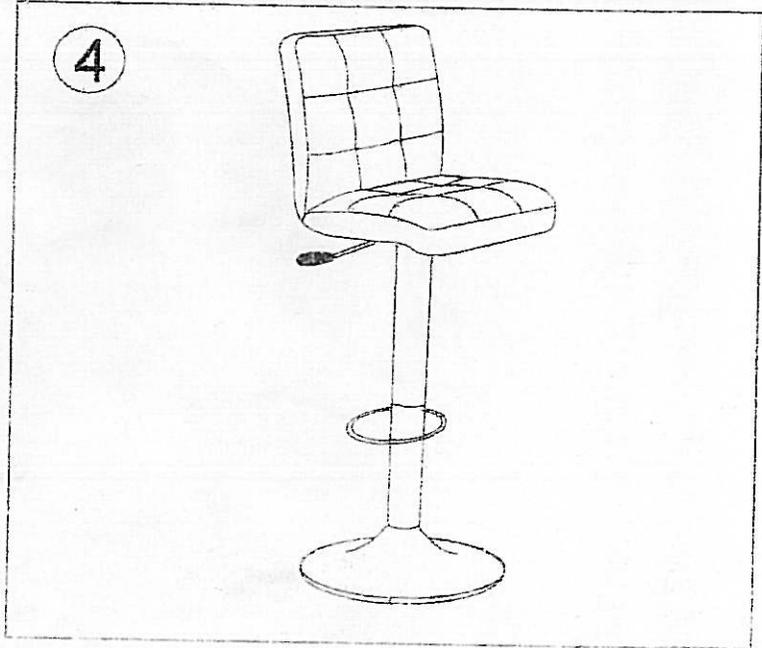
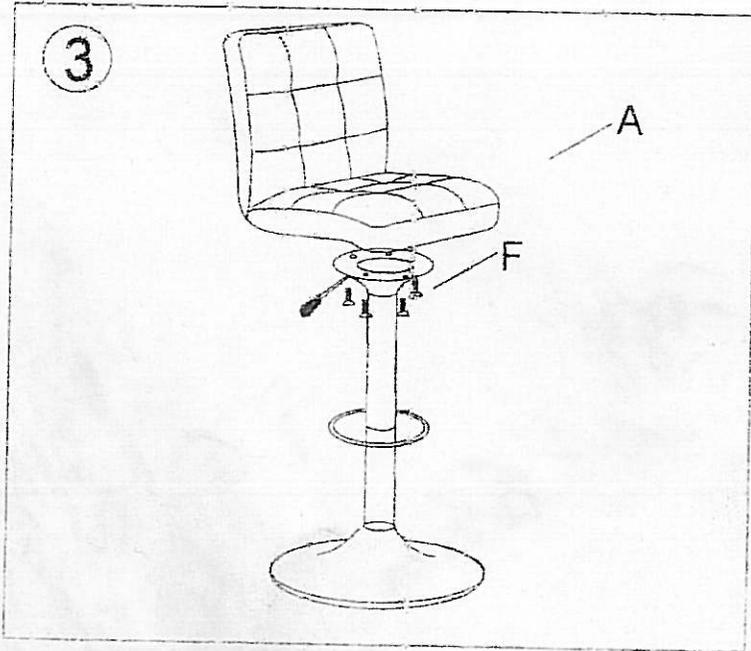
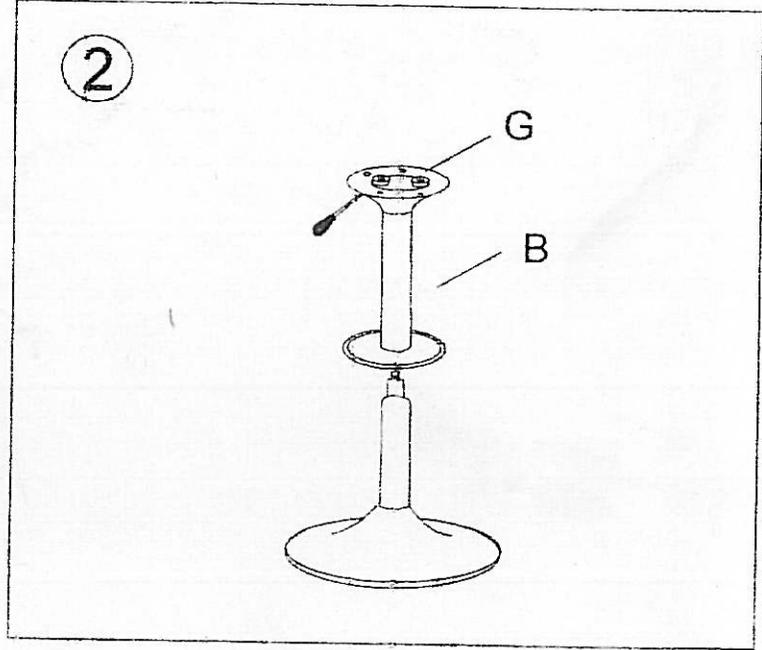



T 3270

T 3270 BAR STOOL


- (A) X1 
- (B) X1 
- (C) X1 
- (D) X1 
- (E) X1 
- (F) X4 
- (G) X2 
- (H) X1 

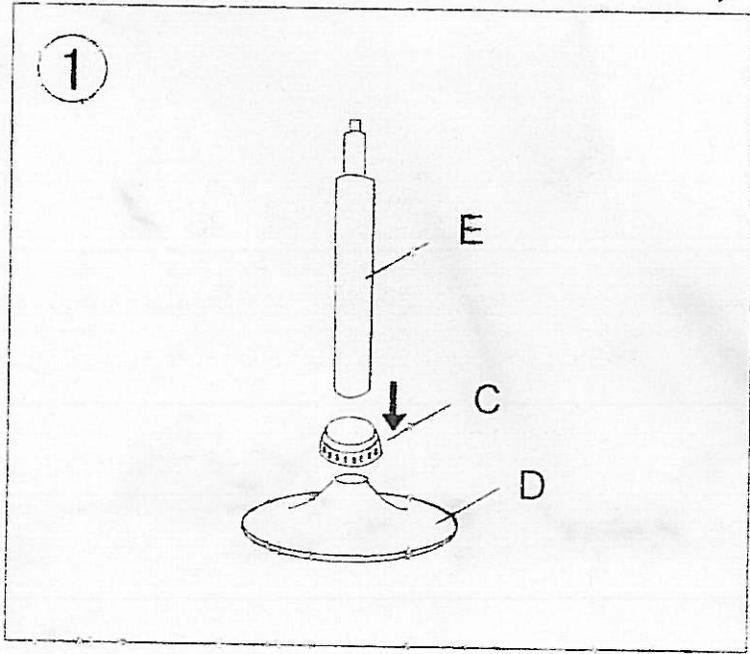


T 3270 BARR T3270

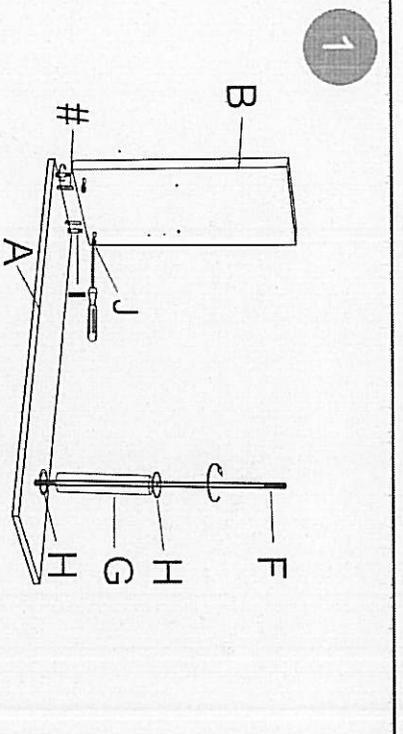


- Ax1
- Bx1
- Fx1
- Gx1
- Hx6
- Ix4
- Jx4

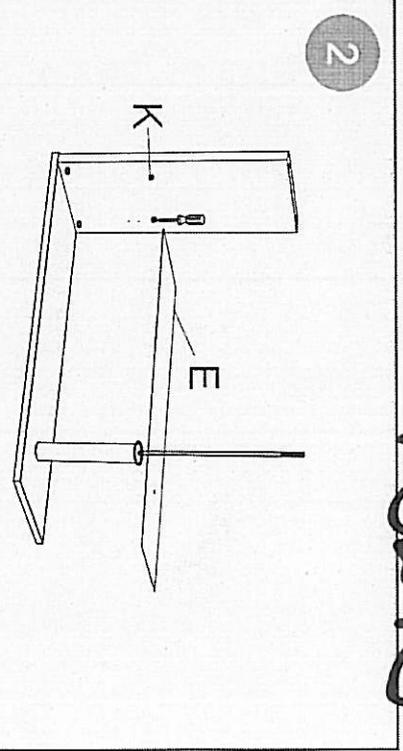


- #x6
- Ex1
- Kx2

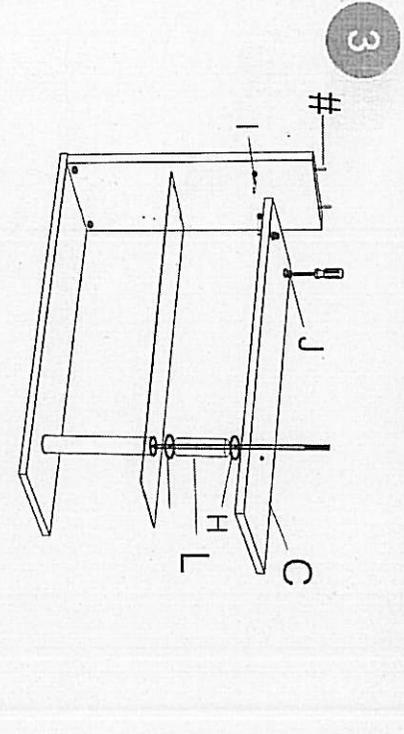


- Cx1
- Lx2

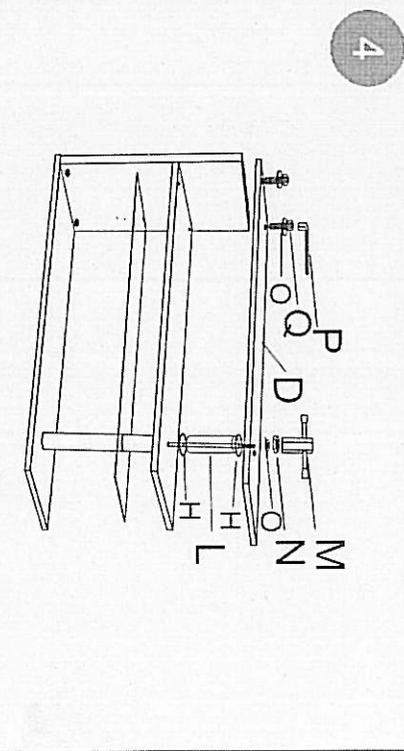

- Dx1
- Mx1
- Nx1
- Ox3
- Px1
- Qx2

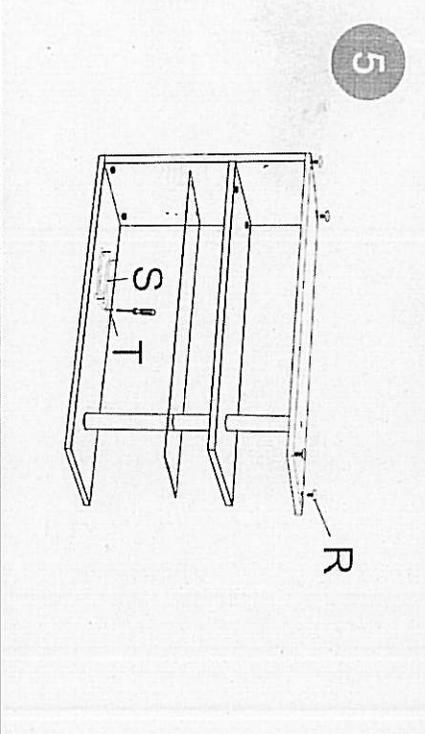

- Rx4
- Sx1
- Tx4
- 0-2x2

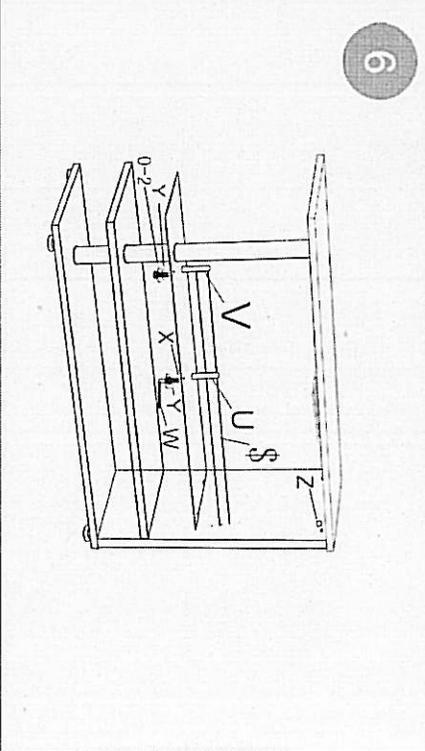

- Ux1
- Vx1
- Wx1
- Xx2
- Yx2
- Zx2
- \$x2

